

Nikon D70 Quick Setup Pocket Guide

Side 1

Settings to Change for Each Photographic Scenario

		Photographic Scenario								
		Portrait	Travel & Landscape	Sports/ Action	Advertising/ Corporate	Weddings	Wildlife	Product	Photo Journalism	Macro
Image Quality ¹		JPEG	RAW	JPEG	RAW	JPEG	RAW	RAW	JPEG	RAW
White Balance ²		Custom	Cloudy -1	As needed	Custom	As needed	Cloudy -1	Custom	As needed	Cloudy -1
ISO ³		200 ~ 800	200	200 ~ 800	200	200 ~ 800	200	200	400	200
Autofocus (CSM 02)		AF-S	AF-S	AF-C	AF-S	AF-S	AF-C	AF-S	AF-S/C	AF-S
Custom Optimize Image Settings	Sharpening ⁴	Ø	Ø	Ø	Ø	Ø	Ø	+1	Ø	Ø
	Tone Comp	0	0	+1	0	0	0	0	+1	0
	Color Mode ⁵	Ia	IIIa (II)	Ia	II	Ia	IIIa (II)	Ia	Ia	IIIa (II)*
	Saturation	0	+	+	0	0	+	0	+	+
	Hue Adjustment	0	0	0	0	0	0	0	0	0

1: If using JPEG, then set for JPEG Fine Large.

2: "Custom" is also called "Preset White Balance".

3: Set ISO higher if you need to handhold camera or stop action.

4: Sharpening is done in post processing software.

5: Use Ia for portraits & online prints. Use IIIa if you print landscapes, travel, outdoor online. Use II if you do your own printing or submit to an agency.

© Out There Images, Inc. - www.outthereimages.com - info@outthereimages.com

Nikon D70 Quick Setup Pocket Guide Side 2

Settings That Don't Change for Most Scenarios

Custom Settings Menu	CSM Setting
01 Beep	OFF
02 Autofocus	See Side 1
03 AF-area mode	Dynamic
04 AF assist	OFF
05 ISO auto	OFF
06 No. CF Card	LOCK
07 Image review	ON
08 Grid display	ON
09 EV step	1/3
10 Exp comp	OFF
11 Center wid	8
12 BKT set	AE Only
13 BKT Order	Under - Meter - Over
14 Command dial	OFF
15 AE-L/AF-L	AE Lock Only
16 AE Lock	OFF
17 Focus area	ON
18 AF area illum	ON
19 Flash mode	TTL. Mostly, but depends on
20 Flash sign	OFF
21 Shutter spd	1/60
22 Monitor off	10s
23 Meter-off	8s
24 Self-Timer	2s
25 Remote	15min

© Out There Images, Inc. - www.outthereimages.com - info@outthereimages.com